




## Quick Start Guide

PhonePeace is a device that lets only the phone numbers you allow (Friend's List), to ring the phone. All others are blocked and sent to voicemail.

Connect PhonePeace as shown:

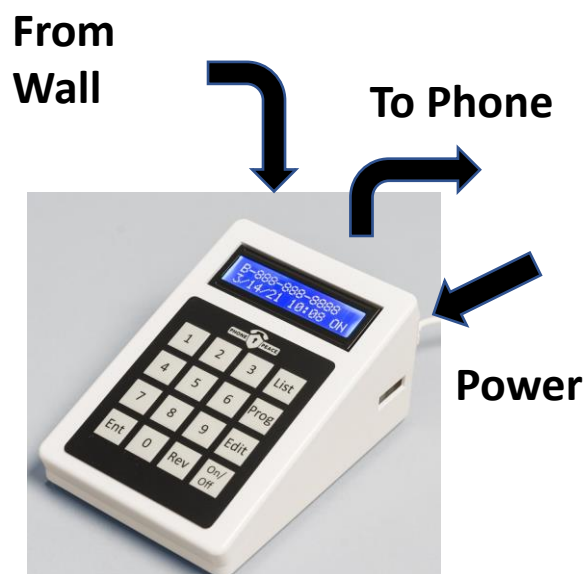

When connecting power to PhonePeace, **gently rock the connector side to side to prevent damage!**

## Programming PhonePeace Manually

- When you first plug in PhonePeace the display will come on for 1 second and then go out.
- To enter numbers into your Friend's List follow the steps below:
- Press the **PROG** key, then enter a **full 10-digit number** with the keys. When done press the **ENT** key.
- Repeat until all numbers are entered.
- When done be sure to press the **On/Off** key so "On" is shown on the display, otherwise PhonePeace won't block any calls. The display will stay on for 30 seconds and then go out.
- To review the numbers in memory, press the **LIST** key and then repeatedly press the **REV** or Review key. Numbers in the display show memory location. Holding **REV** key speeds the review.
- Press **On/Off** until "Off" is shown to stop blocking.

## Editing Friend's List Numbers

- Press the **LIST** key and then repeatedly press **REV** key until you find the number to be edited.
- Press the **EDIT** key and then enter a full-10-digit number or just press the **EDIT** key with no 10-digit number if you want to delete the number.
- Press the **LIST** key and the **REV** key to confirm the edit.
- Be sure to press **On/Off** key to put the unit back in operation.

## Operation

- For a call in the Friend's List the display will show F-(Friend), the caller's number, & the phone will ring.
- For calls not in the Friend's List, the display will show B-(Blocked), the number, & the phone won't ring.
- Display stays on for 30 seconds.

## Clearing The Memory

- If you ever want to clear the Friend's List, proceed with caution. If you programmed the numbers manually, when you clear the Friend's List, **all the numbers will be lost forever.**
- If you programmed the Friend's List with a computer, the numbers can be reloaded at any time. (Next Section).
- To clear the Friend's List, press and hold the **PROG** Key for 7 seconds until "Clearing" is shown in the display. You will then see the message "Memory Cleared".

## Program Friend's List with a Computer

- PhonePeace can be programmed with a Windows PC or Mac with a spreadsheet. A programmer is supplied with the unit. See [www.myphonepeace.com/faq](http://www.myphonepeace.com/faq) for video instructions.

## Setting 0 or 1 Ring

- PhonePeaceRS blocks all rings if the caller is not in the Friend's List. Some Panasonic phones need 1 ring to show the caller ID on the handset. Most Panasonic phones will also block the first ring. (See FAQ's next section).
- To set up PhonePeace to ring once on a blocked call, press **On/Off** key 10 times until the display shows "1 ring" and "On". After 30 seconds the display will go out.
- To revert back to no rings, unplug power to the unit and reconnect.

## What's in the box

- PhonePeace unit
- Power cord
- Power adapter
- Telephone cable
- Programmer
- Quick Start Guide

## How to Use PhonePeace with and Answering machine

- Answering machine setup and most common questions along with "how to" videos can be found at [www.myphonepeace.com/faq](http://www.myphonepeace.com/faq)
- If you do not own a computer, please contact our technical support line at 734-822-0950 for help.
- **Important Note: If you are making a call and the phone does not have a dial tone, immediately disconnect the wire from the wall to PhonePeace and connect it directly to the phone. MBR Technologies is not responsible for any damage resulting from disconnection of your phone when using PhonePeace.**

PhonePeace is a product of MBR Technologies LLC 3/31/23